

Warranty

Thank you for choosing a BLANCO product.

We deliver our products with a good quality and provide 2-years-warranty with our customers . In case of heavy damage and malfunction due to our manufacturing or structural defects, poor materials, etc. We will repair or replace it free of charge within the warranty period.

Model name/product number		
Delivery date		YYYY/MM/DD
Customer	Name	
	Address	
	Phone	— —
Dealer	Name	
	Address	
	Phone	— —

This warranty promises a free repair or a free replacement to the defects that occur under normal use despite of according to the instruction manual under the warranty period.

This warranty excludes the defects that are not related to the product itself, such as connections to drainage or overflow parts or connections to the top plate.

This warranty is valid for 2 years from the date of delivery written in above form by the person in charge.

If you request a free repair or replacement, present this page to the store, the installation company, or the building management company which you purchased from.

This warranty is valid only when all information are filled out on the upper registration form.

This warranty page will not be reissued. Please keep it in a safe place.

This warranty is valid only in Japan.

THIS WARRANTY IS NOT ADAPTED IN THE FOLLOWING CASES REGARDLESS OF THE WARRANTY PERIOD

Defects not due to the product, but due to carelessness or negligence in the installation of parts to the product, installation of the top plate, or construction.

Defects caused by reasons other than the product, such as deformation of the building frame.

Defects caused by the use of non-genuine parts.

Defects caused by improper usage of the product.

Defects caused by improper repair, modification, or disassembly.

Malfunctions caused by falling or strong impact during transportation or installation.

Defects due to deterioration over time under the normal use.

Failures caused by sand or red rust inside the pipes

Failures caused by fire, earthquake, water damage, lightning, freezing, or other natural disasters, earthquakes, or special weather or environmental conditions.

Failures caused by the use in highly corrosive environments, such as near the coast or hot springs.

No presentation of this warranty page, or insufficient information on the upper registration form.

BLANCO

KITCHEN SINK INSTRUCTION MANUAL



[INDEX]

Safety Precautions	P.2
Draining	P.3
Care and Maintenance	P.3
Warranty	P.4



Safety precautions





After reading this instruction manual, be sure to keep it in a place where the user can access it at any time.
 When transferring this product to another person, be sure to attach this instruction manual.
 The manufacturer has no product liability of any damage to persons or properties, the damage which are caused by not following this instruction manual and installation manual.
 The manufacturer has no product liability of any harm to persons or properties, the damage which are caused by modification or repair by the user.





■ These signs indicate the degree of harm or damage that can occur if it is used incorrectly.

 WARNING RISK OF DEATH OR SERIOUS INJURY	 CAUTION RISK OF INJURY OR PROPERTY DAMAGE
--	--

■ These signs indicate the contents to be observed.

 MUST FOLLOW	 SHOULD NOT DO
--	--

 
 WARNING	
 Do not climb on the worktop or sink May cause injury, product deformation or damage, and property damage such as household goods due to water leakage.	
 Do not place or drop heavy objects on the worktop or sink. May cause injury, product deformation or damage, and property damage such as household goods due to water leakage.	
 Do not install, disassemble, or replace parts of the faucet except for a specialist May cause injury and product failure. Also leads to damage to property such as household goods due to water leakage.	

 CAUTION	
 Do not dump used hot oil and large amounts of boiling water directly down the drain May deform the drainage equipment and cause water to leak. Make sure to run the hot water at the same time as the water.	
 Do not use nylon scrubbers or sharp objects for cleaning May cause damage to the worktop or sink surface.	
 Do not use kitchen cleansers, bleach, thinner, or benzene for cleaning. May cause scratches or discoloration of the worktop or sink, or damage to rubber or resin parts.	

ABOUT "SILGRANIT"
SIRGLANIT is a hard material with a hardness of 7 on the Mohs scale, making it scratch-resistant and stays clean. Heat resistant up to 280°. No need for strong detergents or chemicals, just scrub with a sponge for regular cleaning.


Draining

*Switch depends on the model

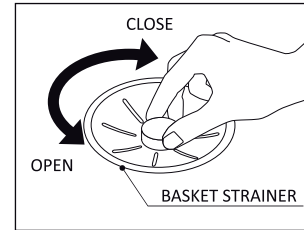


Knob switch

 Turn left / right to open / close with the knob.

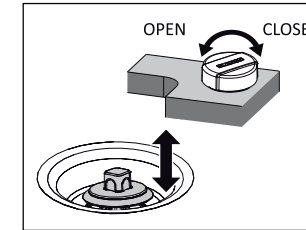

Rotary switch for pop-up flow

 Turn left / right to open / close with the rotary switch.

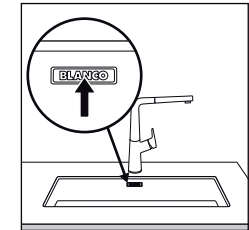


Overflow

Water will be drained from here.

How to remove the overflow plate

 Press firmly on the left or right side of the plate with your fingers or tools. *Be careful of the scratch
 Pinch the pop-up side and take out.
 Follow the steps when you return it

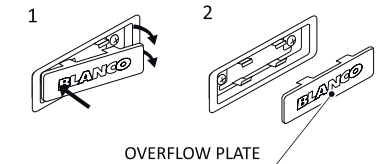

Care and Maintenance

<Daily care>

Please clean kitchen sink regularly. Use a sponge with a soft side with a neutral detergent.

<Cleaning scaly marks >

If the sink is exposed to water for a long time, the lime scale may appear. Use a soft sponge with an acid-based detergent such as citric acid to dissolve the limestone. SILGRANIT is a strong material with high color fastness and chemical resistance, however, acidic detergents may cause corrosion of metal drainage fittings. Rinse thoroughly to wash the detergent. Wipe and dry with a microfiber cloth to prevent water stains caused by residual water.

<Cleaning metal stains>

SILGRANIT is a very hard material, however some cookware may scrape and stick to the sink surface. Use a sponge with a soft side with a little cooking oil and rub gently on the surface. And rub gently with a little detergent after that. Rinse thoroughly to wash the detergent. Wipe and dry with a microfiber cloth to prevent water stains caused by residual water.